

SeaEra Toilet

INSTALLATION AND MAINTENANCE INSTRUCTIONS

(Manufactured after December 2021)

THE FOLLOWING ARE CAUTIONARY STATEMENTS THAT MUST BE READ AND FOLLOWED DURING BOTH INSTALLATION AND OPERATION.

WARNING:



Raritan Engineering Company, Inc. recommends that a qualified person or electrician install this product. Equipment damage, injury to personnel or death could result from improper installation. Raritan Engineering Company, Inc. accepts no responsibility or liability for damage to equipment, injury or death to personnel that may result from improper installation or operation of this product.

WARNING:

HAZARD OF SHOCK OR FIRE



Always use recommended fuse, circuit breaker and wire size.

Motors used with this product are "Ignition Protected". They are not however, explosion-proof.

DO NOT run continuously for more than 30 seconds.


WARNING:

HAZARD OF FLOODING - Always shut off seacock(s) before leaving the boat unattended.



Double clamp all below waterline hose fittings and check frequently for integrity.

**Raw Water Model
(Integral Pump)**

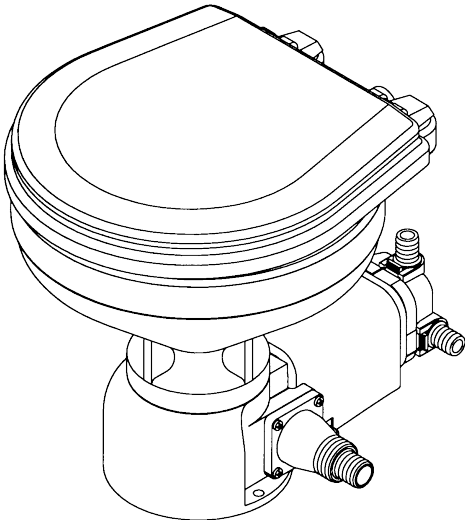

The SeaEra toilet is a powerful centrifugal macerating toilet that thoroughly breaks down waste.



1-800-352-5630

www.raritaneng.com

L318 0125 jlc

IMPORTANT SAFETY INSTRUCTIONS:

Toilets mounted at or below the waterline must have a vented loop installed in the discharge line. The top of the vented loop must be a minimum of 4" (10cm) above the waterline at the boat's greatest angle of heel (see vented loop manufacturer's instructions).


Sea Water Models must also have a vented loop installed between the intake pump and the toilet bowl. Double clamp all below waterline connections.

Always replace circuit breaker and fuses with same rating. Use Raritan parts to maintain ignition protection requirements.

WARNING:

Young children should NOT be left unsupervised around toilet. Serious injury or death could occur. A sharp blade is used for maceration of waste. Children can drown in water retained in the bowl. Seat and/or lid could close and strike child.

Install the Warning Label (L322) where it can be easily seen.

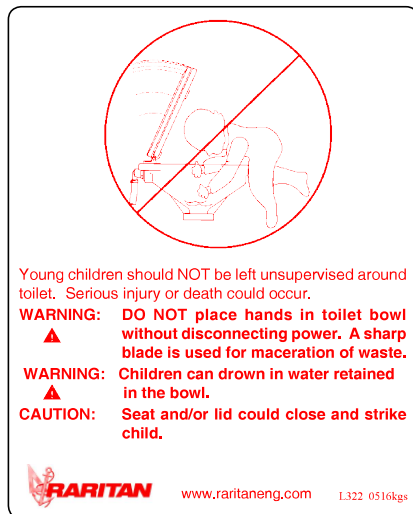

Cleaning Instructions


IMPORTANT: Do not use cleaners that contain ammonia, ethyl acetate, phosphoric acid or concentrated chlorine bleach. Do not allow acids, such as vinegar, and other cleaners to sit for extended periods of time in the toilet. These may cause damage to the toilet. Do not use abrasive cleaners or cleaning pads. Flushing fresh water through toilet when leaving for extended periods is recommended.

Using C.P. a bio-enzymatic toilet bowl cleaner (available from Raritan Engineering Part# 1PCP32) will keep the bowl clean and fresh smelling.

Recommend Visual Inspection

- ✓ No leaks at toilet and hose connections
- ✓ Hose clamps
- ✓ Condition of hoses
- ✓ Seacocks
- ✓ Condition of wires and connections
- ✓ In-Line Strainer (if installed)

- No special toilet paper is required.
- Water should appear in the bowl within ten seconds. If not, see troubleshooting section.
- Hard objects or stringy substances (paper towels, feminine hygiene products, cigarette filters, etc.) must not be thrown into the toilet as they will cause damage.
- Always shut off seacock(s) before leaving the boat unattended.

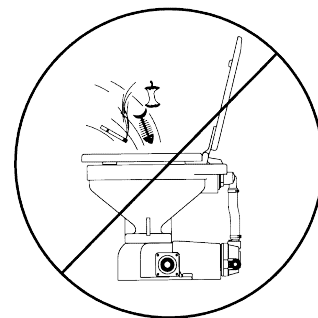

SYSTEM START-UP

1. Open seacock(s).

NOTE: Pressurized fresh water models; open water source valve.

2. Turn on power to toilet.
3. Flush toilet per Operation Instructions.
4. Check for leaks.

IMPORTANT: If toilet does not flush properly or if water does not enter the bowl within 10 seconds, refer to Troubleshooting.

WINTERIZING

- Improper winter lay up is a major cause of marine toilet failure.
- Use only nontoxic antifreeze.
- Flush toilet several times to clear waste from system.
- Dispose of all antifreeze in accordance with local and federal regulations.
- Winterize holding tanks, plumbing, treatment systems (MSD's), etc. independently following manufacturer's instructions.

Parts Required

3/4" (19mm) I.D. intake hose approximately 3 feet (1m) long.

1" (25mm) or 1 1/2" (38mm) I.D. discharge hose approximately 3 feet (1m) long.

Two buckets

Nontoxic antifreeze approximately 1 quart (1 liter)


Steps

1. Close the intake and discharge seacocks.
2. Turn off power to unit.
3. Disconnect and drain intake hose, discharge hose and In-Line Strainer.
4. Connect short hoses to toilet's intake and discharge.
5. Place one bucket under hose connected to toilet's discharge.
6. Pour nontoxic antifreeze in other bucket.
7. Place hose connected to intake pump into bucket with antifreeze.
8. Turn on power to unit and flush toilet until antifreeze begins to be discharged from toilet.
9. Disconnect power to toilet.

RECOMMISSIONING

1. Using the buckets, hoses and approximately 1 gallon (3.8 liters) of clean fresh water, flush antifreeze out of the toilet (see Winterizing). Dispose of antifreeze in accordance with local and federal regulations.
2. Reconnect the intake and discharge hoses and open both seacocks and water source valve.
3. Check all connections for leaks with several test flushes.

Sea Water Model (Integral)

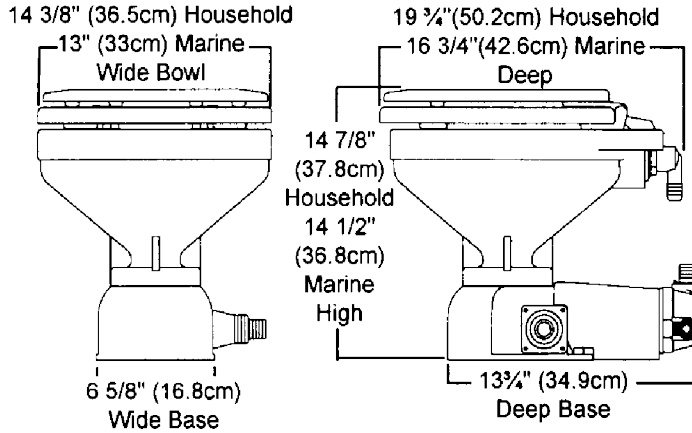

CONVERSIONS

Wire - AWG to mm²

AWG	16	14	12	10	8	6	4	2
mm ²	1.5	2.5	4.0	6.0	10.0	16.0	25.0	35.0

Feet to Meters

Feet	10	15	20	25	30	40	50
Meter	3.1	4.6	6.1	7.6	9.2	12.2	15.2

Plumbing

Maximum suction of Intake pump (Maximum height above waterline)	4 Ft. (1.2m) from Intake Pump.
Maximum height of discharge vented loop	6 Ft. (1.8m) from base of toilet.

NOTES: for Wiring

1.	Distances are from source to unit and back to source.
2.	Recommended conductor wire minimum AWG (mm ²) for 3% voltage drop.
3.	Recommended conductor sizes are based on 105°C rated insulation. Refer to ABYC Standards for other insulation ratings.
4.	For 120/240 VAC units, use 12VDC specifications from transformer to unit.

Raw Water Model - Recommended Wire and Fuse/Circuit Breaker Size

Units Voltage	Circuit Breaker/ fuse size (amps)	Integral Pump and lower base Amp. draw @ nominal voltage	15 feet	20 feet	30 feet	40 feet	50 feet
12 VDC	25	18	10 AWG	8 AWG	6 AWG	6 AWG	4 AWG
24 VDC	15	10	14 AWG	14 AWG	12 AWG	10 AWG	10 AWG
32 VDC	15	7.5	14 AWG	14 AWG	14 AWG	12 AWG	12 AWG

Parts Included

All Complete Toilets

Toilet bowl, seat and cover
Lower base assembly, motor cover
1 1/2" (38mm) 90° Discharge Fitting
Adapter, 1" FPT x Barb
Momentary Flush Switch

Tools Required

5/16" (8mm) nut driver, wrench or screw driver,
5/8" (16mm) drill bit, bit for drilling mounting
surface, wire cutters, wire terminal crimpers, hose
cutters, tape measure

90° Rotation of Toilet Bowl

Toilet bowl can be rotated 90° on the base, for
installing in confined locations (FIG 1).

**NOTE: Rotating bowl may require a longer length
of hose.**

1. Determine which direction bowl is to
be mounted.
2. Remove four vinyl caps at the base of toilet
bowl.
3. Remove four nuts and shoulder washers.
4. Carefully remove toilet bowl from base.
5. Rotate toilet bowl to desired position.
6. Replace four shoulder washers, nuts and
vinyl caps.

**NOTE: Tighten nuts carefully and evenly.
DO NOT OVER TIGHTEN.**

Mounting Toilet

Mounting surface must be flat and solid.

1. Install seat on toilet (FIG 2).
2. Remove motor cover.
3. Place toilet where it will be located.
Make sure there is room to route hoses.
Make sure seat will open properly (FIG 3).
4. Mark location of toilet base mounting holes on
mounting surface (FIG 2).
5. Drill holes for toilet mounting bolts/screws.

**NOTE: Hole size will depend on type of bolt/
screws used (5/16" [8mm]) size bolts/screws are
recommended).**

6. Secure toilet to surface

Additional Parts Required

- Four stainless steel mounting bolts or lag
screws (minimum 1/4" [6mm]) and washers
- 1" (25mm) or 1 1/2" (38mm) I.D. discharge
hose
- 3/4" (19mm) I.D. reinforced intake hose
- 3/4" (19mm) and 1" (25mm) or 1 1/2" (38mm)
hose clamps (two for each connection below
waterline)
- Wire (See specification chart)
- Terminals
- Fuse/circuit breaker (See specification chart)

FIG 1

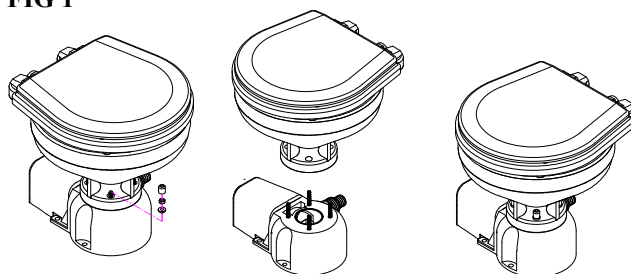


FIG 2


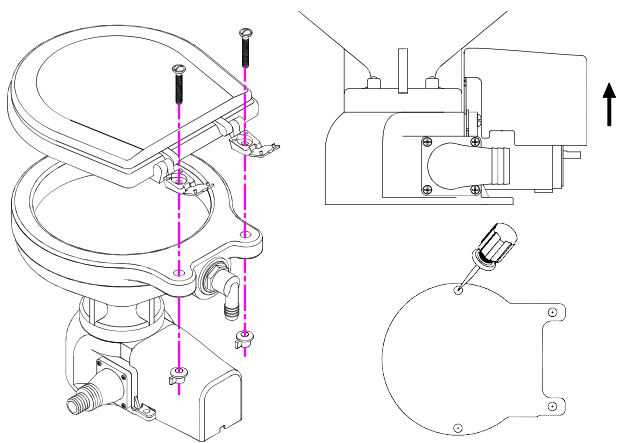


FIG 3

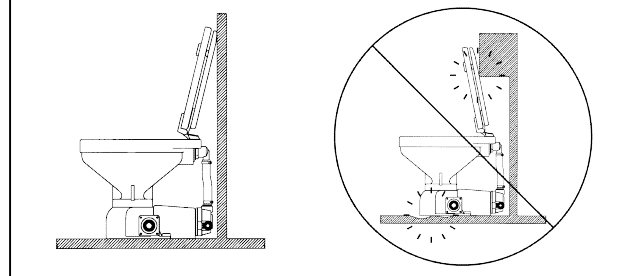

**NOTE: Replace existing hose from the intake
pump to the toilet bowl with a longer hose.**

Mounting Momentary Flush Switch

Part# PRS

- Mount switch in an accessible location.
- Make certain wires can be routed to switch.
- Wire terminals must have clearance when installed.
- See page 9 and 10 for installation details.
- See wiring section of this manual for wiring instructions.

Mounting In-Line Strainer (Optional) (FIG 6)

Make sure strainer bowl is tight.

1. Locate strainer where it will be accessible.
2. Mark and drill mounting holes.

NOTE: Hole size will depend on type of bolts/screws used (1/4" [6mm] size bolts/screws are recommended).

3. Install fittings provided (PLA14) on strainer's inlet and outlet ports.

NOTE: Use thread sealant.

4. Mount strainer. Hoses must be installed according to flow marking on strainer top.

PLUMBING

WARNING: HAZARD OF FLOODING

Toilets mounted at or below the waterline, at greatest angle of heel, and connected to a Seacock/Thru Hull Fitting(s) **MUST** have **VENTED LOOPS** installed in toilet discharge plumbing and between raw water intake pump and toilet bowl.




Install vented loops per manufacturer's instructions. Double clamp all below-waterline connections.

IMPORTANT:

If water retention in the bowl is desired, the addition of a vented loop may be needed in the discharge hose to prevent water draining out of the bowl. Call technical support for additional details.

IMPORTANT

- Discharging untreated sewage is forbidden in all U. S. waters within the three-mile limit.
- Fittings and 90° bends should be kept to a minimum.
- Thru-hull fittings and seacocks must be installed where they are easily accessible.
- Use only quality reinforced sanitation hoses such as Raritan Saniflex (SFH)
- Double clamp all below waterline connections.

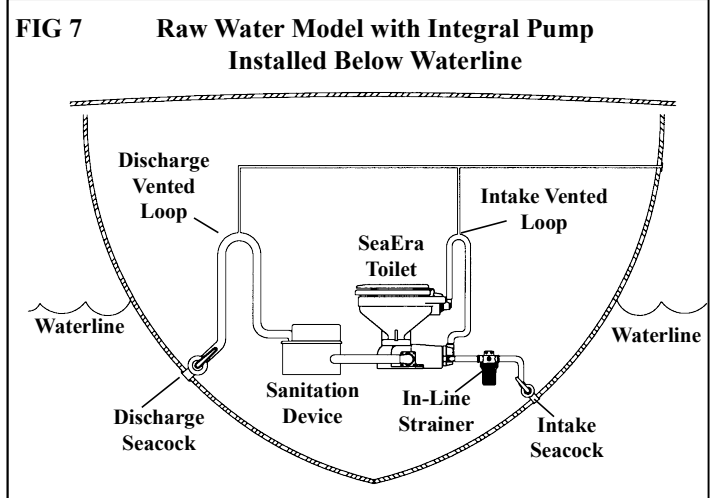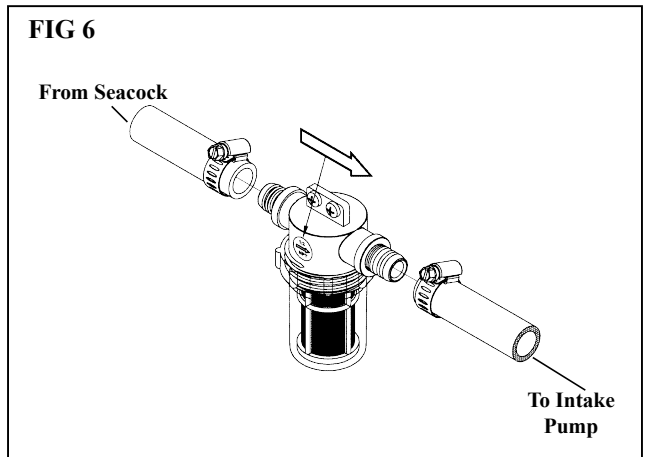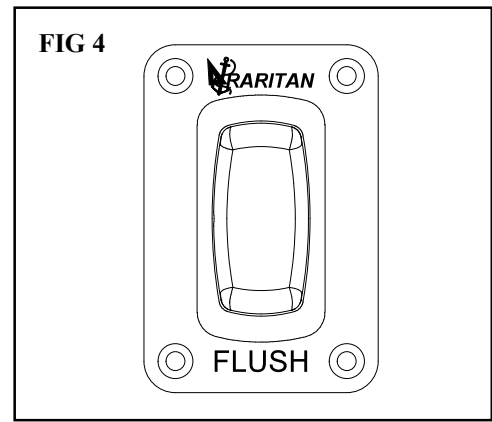

Discharge Fittings

The SeaEra has a straight discharge fitting installed. A 1 1/2" (38mm) 90° fitting is also provided. Also provided is a 1" (25mm) hose adapter for the 90° fitting (FIG 8).

To change the discharge fitting:

1. Remove four screws securing fitting to base.
2. Remove flange adapter from the straight fitting and install it on the 90° fitting.
3. Install 90° fitting to base. Be certain the joker valve is properly in place.
4. If 1" (25mm) discharge hose will be used, install the 1" (25mm) hose adapter into the 90° fitting. Use non hardening thread sealant.

IMPORTANT: Do not overtighten!

Discharge Lines

Raritan Sanitation Hose is recommended. Use part number SFH for 1 1/2" (38mm) hose or SFH1 for 1" (25mm) hose

1. Connect sanitation hose to discharge fitting on toilet.

NOTE: Discharge fitting is designed for 1" (25mm) or 1 1/2" (38mm) hose. 1 1/2" (38mm) hose is secured at top of fitting and 1" (25mm) is secured at the bottom. It is not necessary to remove the 1" (25mm) barb if using 1 1/2" (38mm) hose. Use the fitting as is.

2. Run hose to appropriate device (e.g.: treatment system, holding tank, etc.).

Intake Lines

Intake pump fittings are interchangeable to allow more flexibility during installation. Inlet ports are located on either side of intake pump. Outlet port (to toilet bowl) is at top of intake pump (FIG 10).

1. Slide fitting clips to open position.
2. Select inlet port to be used.
3. Install appropriate fittings into inlet and outlet ports.

NOTE: The 90° fitting can be rotated 360°.

4. Install the plug fitting into unused inlet port.

IMPORTANT: Be sure not to install plug fitting into outlet port! Damage will occur!

5. Slide fitting clips back to closed position.
6. Connect hose from seacock to inlet port of In-Line Strainer (if used). Use hose clamp provided.
7. Connect hose from outlet port of In-Line Strainer to inlet port of intake pump. Use hose clamp.

FIG 8

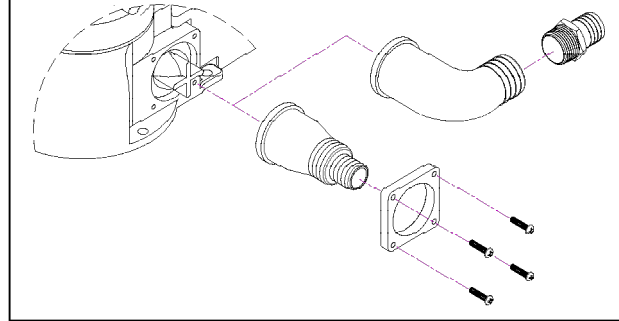


FIG 9

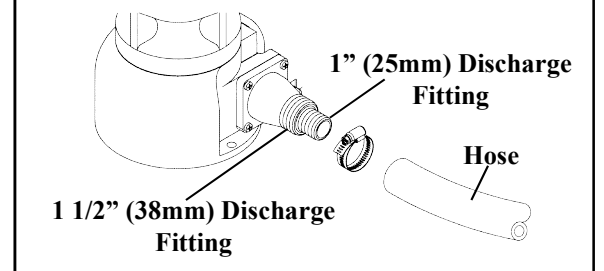


FIG 10

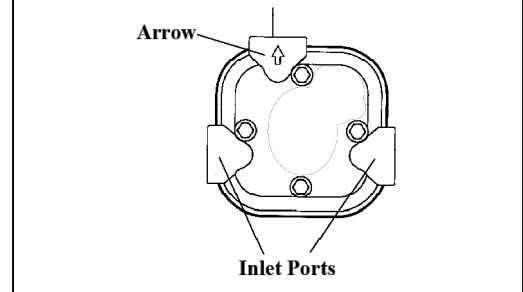


FIG 11

CLIP MUST BE FULLY SEATED IN CLOSED POSITION


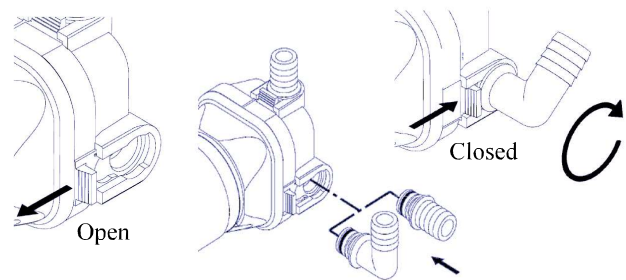


FIG 12

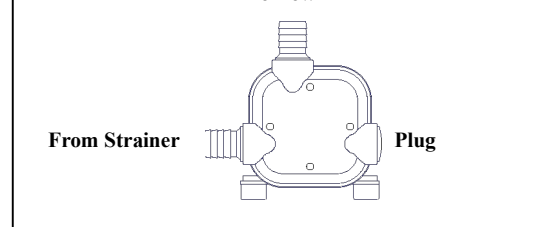


WIRING

WARNING: Hazard of Shock and Fire

- Always use proper wire, wire connectors and fuse/circuit breaker. See Specification Chart.
 - Secure wire properly.
 - Do not connect appliances to toilet circuit.
 - Make sure power is off before proceeding.
 - Use proper wire terminals for all wire connections.
1. Determine proper wire size by measuring distance from:
 - Power source to Switch to toilet motor and back to power source.
 2. Select proper wire and fuse/circuit breaker size from Specifications on Installation page.
 3. Install fuse/circuit breaker in positive line at source.
 4. Connect positive wire from fuse/circuit breaker to Switch.
 5. Connect wire from Switch to orange wire on motor(s).
 6. Connect wire from battery negative or power source ground buss to black wire (negative) on motor(s).

FIG 13


Integral Pump Wiring

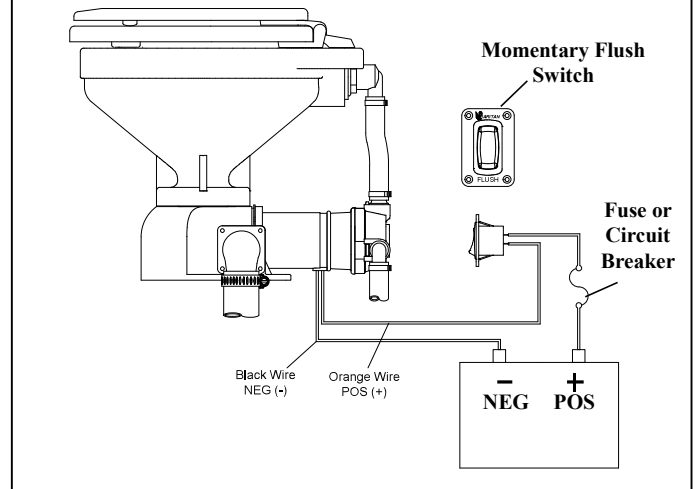

OPERATION


Press switch and hold until all waste is cleared from the toilet bowl.

FIG 14

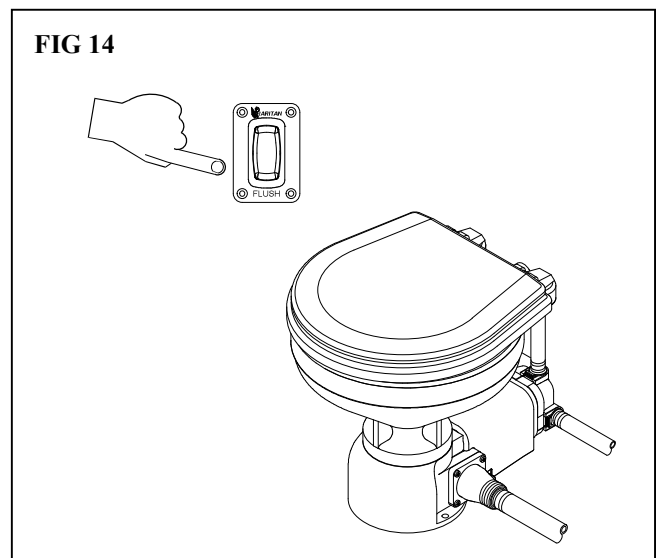

Momentary Flush Switch (PRS) allows momentary operation of toilet by pressing switch.

- IP67 certified sealed front components
- Contact Ratings: 12VDC/20 AMPS, 24VDC/15 AMPS
- 1/4" (6mm) Quick Connect Terminals
- Stainless Steel mounting plate

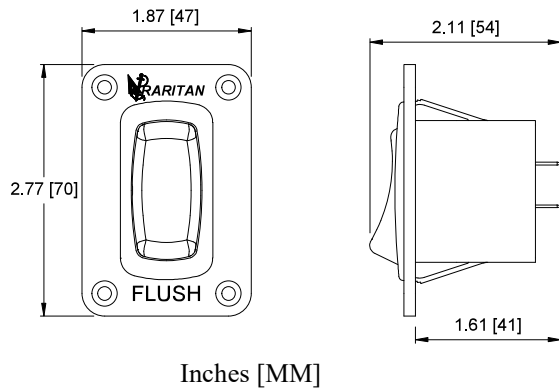


- **IMPORTANT:** Make certain that there is adequate clearances behind switch for wire connectors.
- Mount Momentary Flush Switch in an accessible location.
- Make certain wires can be routed to Momentary Flush Switch.

Mounting Switch

1. Cut out hole for switch.
2. Use panel to mark screw pilot hole locations.

NOTE: #6 screws are provided, pilot hole size is dependent on material of mounting surface.

3. Route wire and connect switch.
4. Mount switch to wall

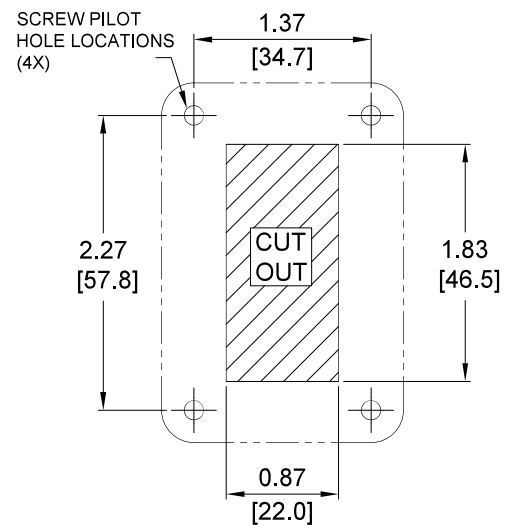


(Not actual size)
Inches [MM]


Wiring

Refer sizes and fuse/circuit breaker sizes on page 5. For Remote Inlet Pumps, it is recommended that Relay Kit be used (Optional). Relay Kit part numbers are 21412A (12VDC) or 21424A (24VDC)


Wiring for Fresh Water Model

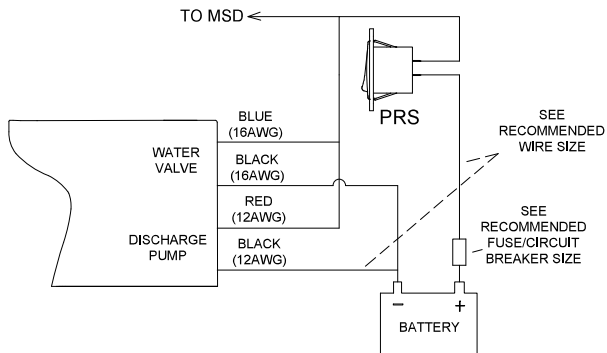

Wiring for Remote Pump Model

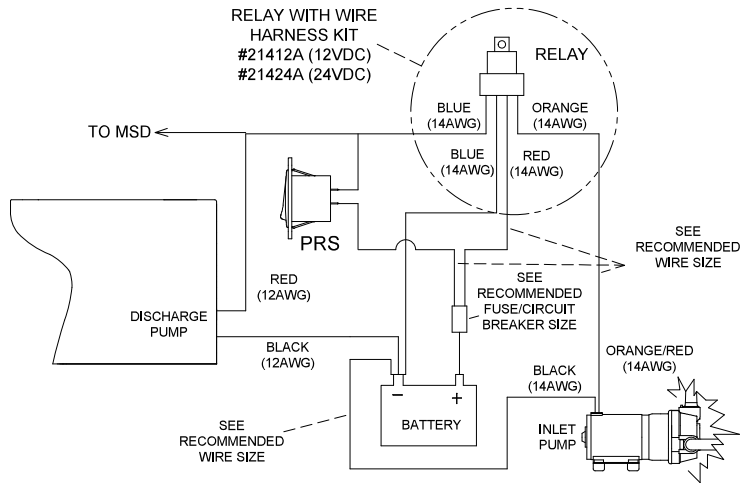

Wiring for SeaFresh Model

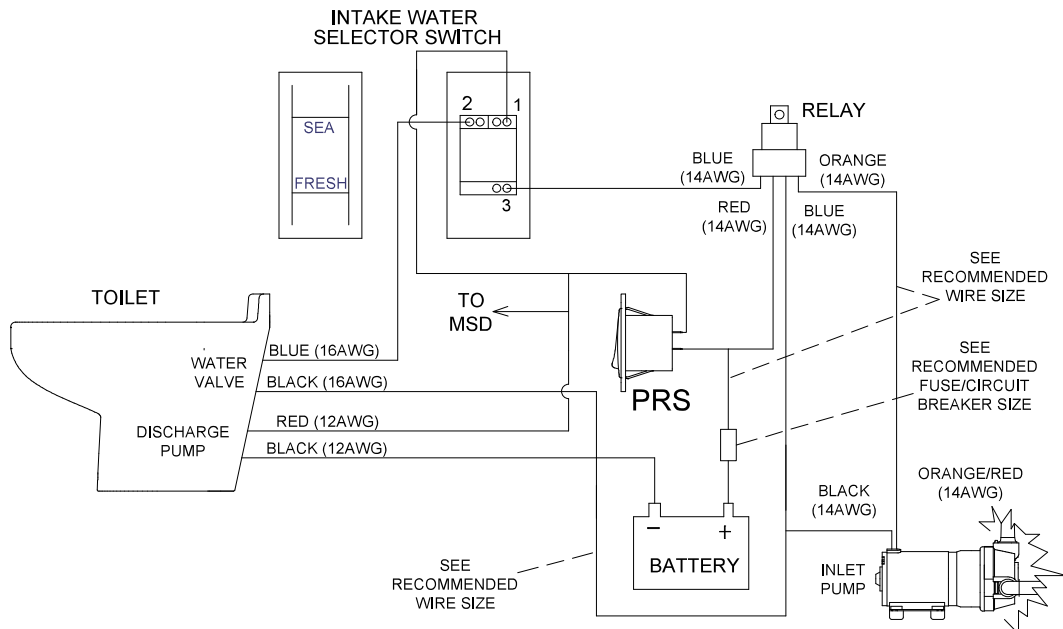

TROUBLESHOOTING


WARNING: HAZARD OF ELECTRIC SHOCK - Before beginning any work on the SeaEra, be sure that all power to the unit has been turned off.

WARNING: HAZARD OF FLOODING - Make sure seacocks are in the CLOSED or OFF position before working on toilet.

NOTE: The following information reflects the most probable causes and solutions to problems although not every possible cause and solution is provided.

Any questions regarding servicing or operation of the SeaEra should be directed to our Technical Support Department in Millville, NJ. Please have model and serial number available before calling.


PROBLEM	POSSIBLE CAUSE	SOLUTION
1. Poor pumpout, especially solids.	1A. Clogged discharge line. 1B. Plumbing restrictions, bends and ells. 1C. Clogged vents. 1D. Mineral buildup in hoses and fittings. 1E. Low voltage.	1A. Be sure discharge seacock is open. Clear line, remove clog. 1B. Replumb to eliminate bends and ells. 1C. Clean holding tank vent and vented loop vents 1D. Clean or replace affected parts. Replace hose if needed. 1E. Check voltage at toilet while toilet is running . If less than nominal voltage of toilet (12, 24, or 32), check condition of batteries and wire sizes. Check terminals and wire connections for corrosion (heat at terminals and junctions indicates a bad or corroded connection).
2. Poor water flow, especially at front of bowl (or no water flow).	2A. Toilet not level. 2B. Restriction in intake line. 2C. Pump sucking air. 2D. Low voltage. 2E. Clogged strainer.	2A. Raise rear of toilet; check with level. 2B. Be sure seacock is open. Clear line-remove clog. 2C. Check all connections from intake thru-hull to intake pump to be sure no air leaks are present. 2D. See 1E, above. 2E. Remove or clear debris from strainer.
3. Foul odors from toilet area.	3A. "Marine life" lodged in rim of bowl. 3B. Permeated discharge hose. 3C. Sewage remaining in discharge line.	3A. Remove and flush bowl with pressure hose to remove all material. Install strainer in intake line to avoid recurrence. Part# 163000 3B. Replace hose with Raritan sanitation hose (#SFH). 3C. Flush toilet longer; replace hose if permeated; reroute hose making a shorter run if possible.
4. Bowl fills while underway.	4A. Pressure buildup at seacocks.	4A. Close intake, then discharge seacock to determine which is causing problem. If discharge, be sure the vent or vented loop is clean. If intake, there is too much pressure on seacock; contact Raritan Technical Support.
5. Water leaking from under unit.	5A. Leaking bowl gasket. 5B. Leak at shaft seal. 5C. Leak from seal plate area.	5A. Tighten (4) bowl mounting nuts (#1226B). 5B. Check seal and motor shaft. 5C. Check seal plate o-ring.
6. Erratic operation/sluggish running.	6A. Worn motor brushes. 6B. Motor bearings damaged by seal leak. 6C. Low or inconsistent voltage.	6A. Return motor to factory for servicing or replacement. 6B. Return motor to factory for servicing or replacement. 6C. See 1E above.

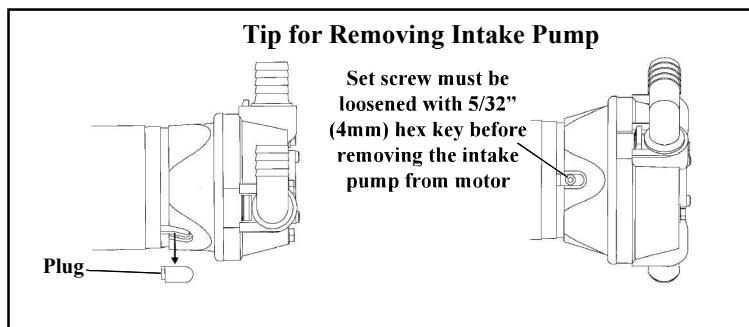

SeaEra PARTS LIST

<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
1108A	Macerator Nut	163000	Inline Strainer (Optional)
1222D	90° Discharge Fitting	PRS	Momentary Flush Switch
1226B	1/4-20 Hex Nut (4)	31-102	Shaft Seal
1234	Bowl Gasket	41-260	Bowl Elbow (Freshwater Models Only)
1236AW	Bowl Spud Assembly	C254	Joker Valve
1236E	Bowl Elbow	CH38	1/4-20 Threaded Stud (4)
1237W	Marine-size Bowl	F098	Mounting Screw (4)
1238SC	Slow Close Seat and Cover (Marine-size)	F164	Discharge Mounting Flange Fastener(4)
1244W	Household-style Bowl	HW1	Mounting Screw Lockwasher (4)
1245SC	Slow Close Seat and Cover (Household-size)	M23A	Macerator Lockwasher (1)
F165	Lower Housing O-Ring, 334 EP, 70 Duro	CH42	PVC Hose 3/4 ID x .120 Wall
1610*	Motor	VCAP	Vinyl Cap (white)
161105AW	Base	RNI	Nylon Shoulder Washer
161107A	Seal Plate O-Ring		
161110A	Seal Plate		
161115	Impeller		
161120	Impeller/Macerator Housing		
53145	Macerator Blade		
161125	Discharge Mounting Flange		
161130	Discharge Fitting		
162405	3/4” Hose Barb - 90° Fitting		
162410	3/4” Hose Barb - Straight Fitting (2)		
162415	Plug Fitting		
162420	Fitting Clip (3)		
162425	Fitting O-Ring (4)		
161140	Motor Cover		
162000W	Diaphragm Pump Assy. (Includes: 162420 (3), 162425 (4))		
221361	Sealing Washer		
F237	Washer D shaped		
PLA34	Adapter: 1” MPT xHS		
162400	Fittings for Diaphragm Pump (Includes 162405 (2), 162410 (2), 162415 (1), 162425 (5))		

SeaEra Exploded Parts View

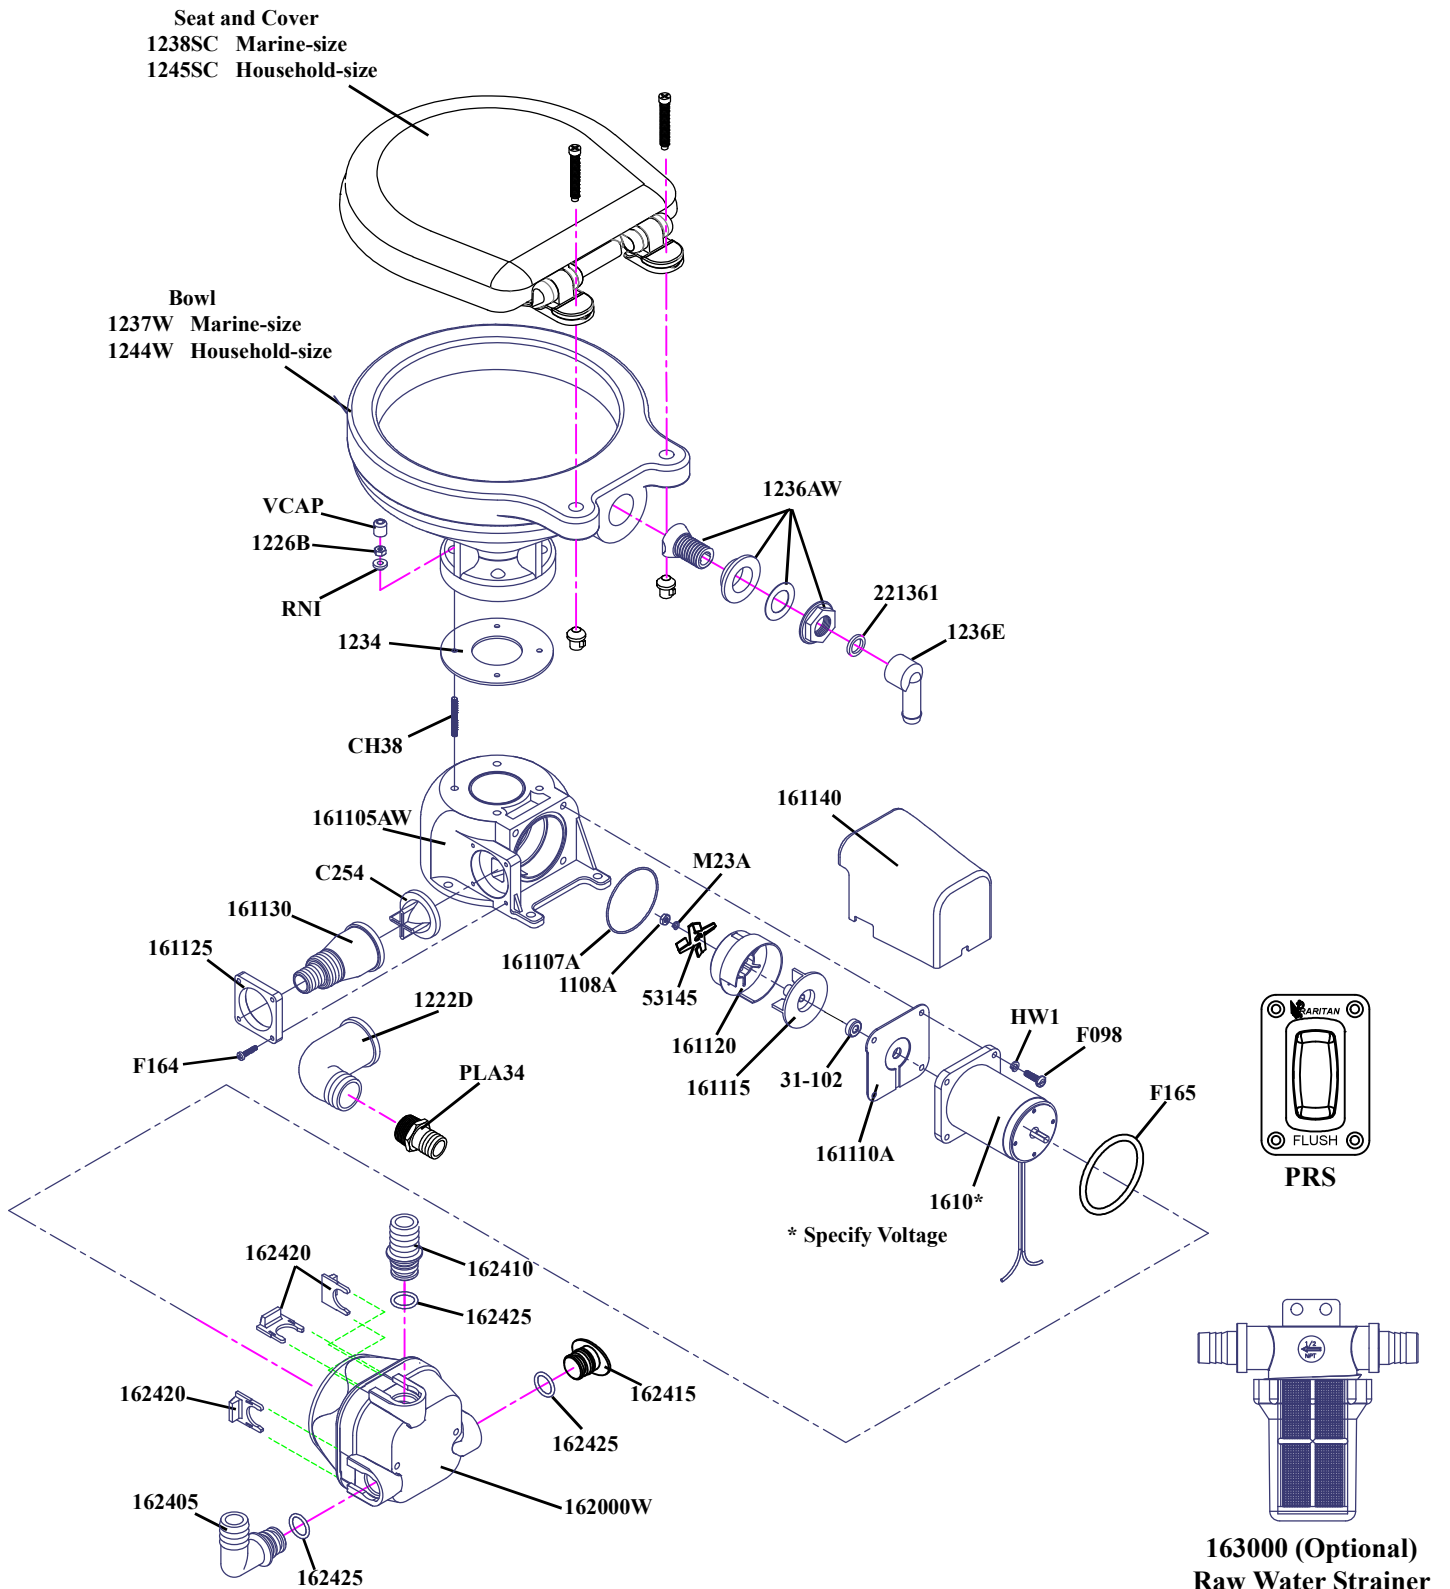

LIMITED WARRANTY

Raritan Engineering Company warrants to the original purchaser that this product is free of defects in materials or workmanship for a period of one year from the product's date of purchase. Should this product prove defective by reason of improper workmanship and/or materials within the warranty period, Raritan shall, at its sole option, repair or replace the product.

1. TO OBTAIN WARRANTY SERVICE, Consumer must deliver the product prepaid, together with a detailed description of the problem, to Raritan at 530 Orange St., Millville, N.J. 08332. When requesting warranty service, purchaser must present a sales slip or other document which establishes proof of purchase. THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION PRECEDENT OF WARRANTY COVERAGE. However, please complete and return the owner Registration Card so that Raritan can contact you should a question of safety arise which could affect you.
2. THIS WARRANTY DOES NOT COVER defects caused by modifications, alterations, repairs or service of this product by anyone other than Raritan; defects in materials or workmanship supplied by others in the process of installation of this product; defects caused by installation of this product other than in accordance with the manufacturer's recommended installation instructions or standard industry procedures; physical abuse to, or misuse of, this product. This warranty also does not cover damages to equipment caused by fire, flood, external water, excessive corrosion or Act of God.
3. ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY FOR BREACH OF CONTRACT WHICH BUT FOR THIS PROVISION MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. ALL IMPLIED WARRANTIES SUCH AS THOSE OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE, IF APPLICABLE, AS WELL AS ANY IMPLIED WARRANTIES WHICH MIGHT ARISE BY IMPLICATION OF LAW, ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG A LIMITED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
4. UNDER NO CIRCUMSTANCES SHALL RARITAN BE LIABLE TO PURCHASER OR ANY OTHER PERSONS FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
5. No other person or entity is authorized to make any express warranty, promise or affirmation of fact or to assume any other liability on behalf of Raritan in connection with its products except as specifically set forth in this warranty.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



530 Orange Street, Millville, NJ 08332 USA
Telephone: 856-825-4900 FAX: 856-825-4409
www.raritaneng.com

Thank you for purchasing a Raritan SeaEra

Model and Serial#:

Please have this available if support is needed.

**SCAN for
Owners Manual**



L318 0125

**SCAN for
Warranty Form**



**If you prefer a printed version of the Owners Materials:
Email: info@raritaneng.com**

**Questions on installation?
Email: techsupport@raritaneng.com**



Do not return this product to store.

PLEASE RETAIN FOR YOUR RECORDS

530 Orange Street
Millville, NJ 08332 USA
Telephone: 856-825-4900
FAX: 856-825-4409
www.raritaneng.com



L318 0125 jlc